

Title:	How to set door station passwords on in door station	Version:	v1.0	Date:	23/11/2017
Product:	Video Intercom	Page:	1 of 4		

HIKVISION

How to set door station passwords on indoor station


1. One indoor stations and a door station (DS-KH8301WT & DS-KD8102V in this document);
2. Client software such as iVMS-4200 or Batch Configuration Tool.

Note:

1. The firmware version of all devices needs to be same (V1.4.71 in this document).
2. This document only use a simple video intercom system to demonstrate the function, which only contains indoor station and door station, doesn't include master station.
3. Make sure that indoor station is already added to door station and the door station could call the indoor station.

Step 1: Set indoor station


Enter the indoor station main interface, and make sure the intercom system running well. Then go to **Settings**

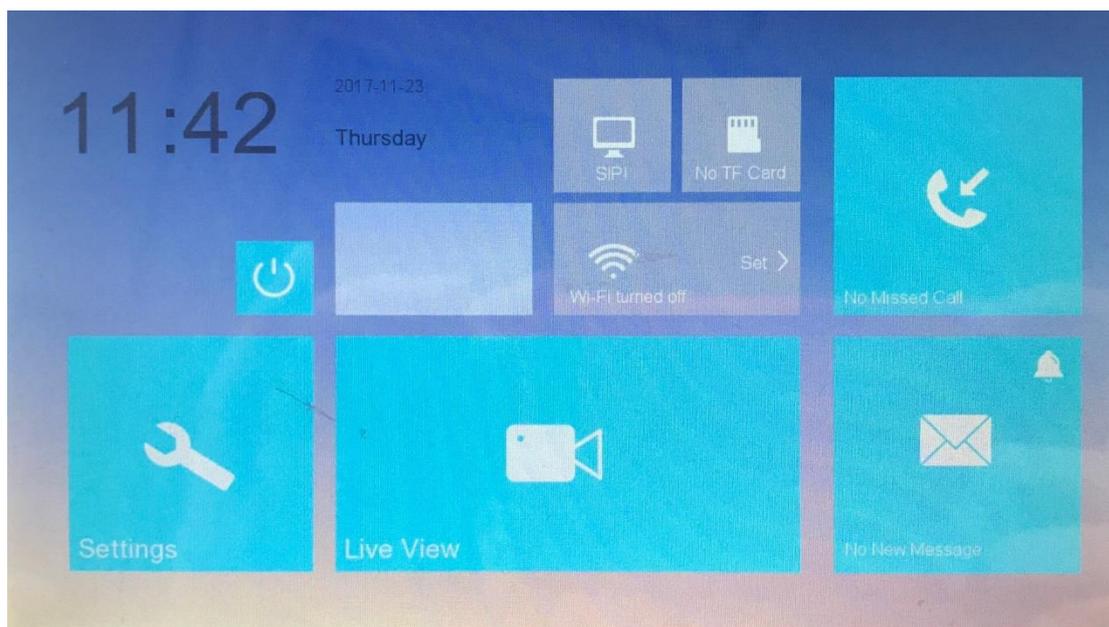

Go to **Password > Unlock > Edit**

Title:	How to set door station passwords on in door station	Version:	v1.0	Date:	23/11/2017
Product:	Video Intercom	Page:	2 of 4		

HIKVISION

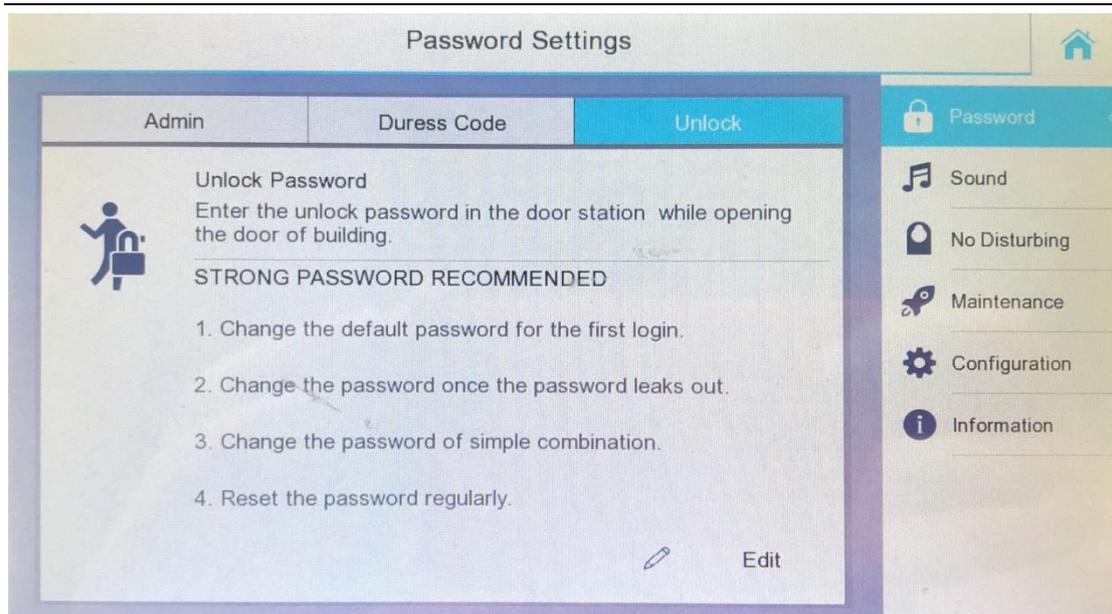


The **default old password** is 123456, Because of the security mechanism, this password exists but it can't be used to open the door. The **new password** must be 6 digits please set a **complex password** to ensure security.



It will show **Password settings succeeded**, then go to the main interface.


Title:	How to set door station passwords on in door station	Version:	v1.0	Date:	23/11/2017
Product:	Video Intercom	Page:	3 of 4		

HIKVISION

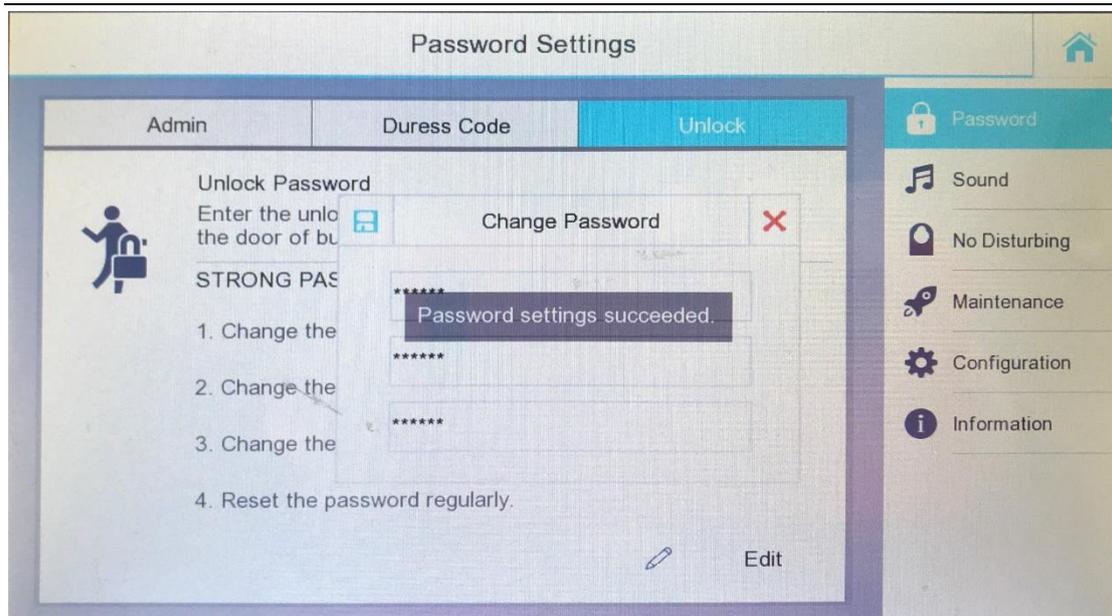

Step 2: Verify the password in door station

Push the button #, then enter the new password and end with button #, the door will open. (in FW is 1.4.23 #room + passwords#)

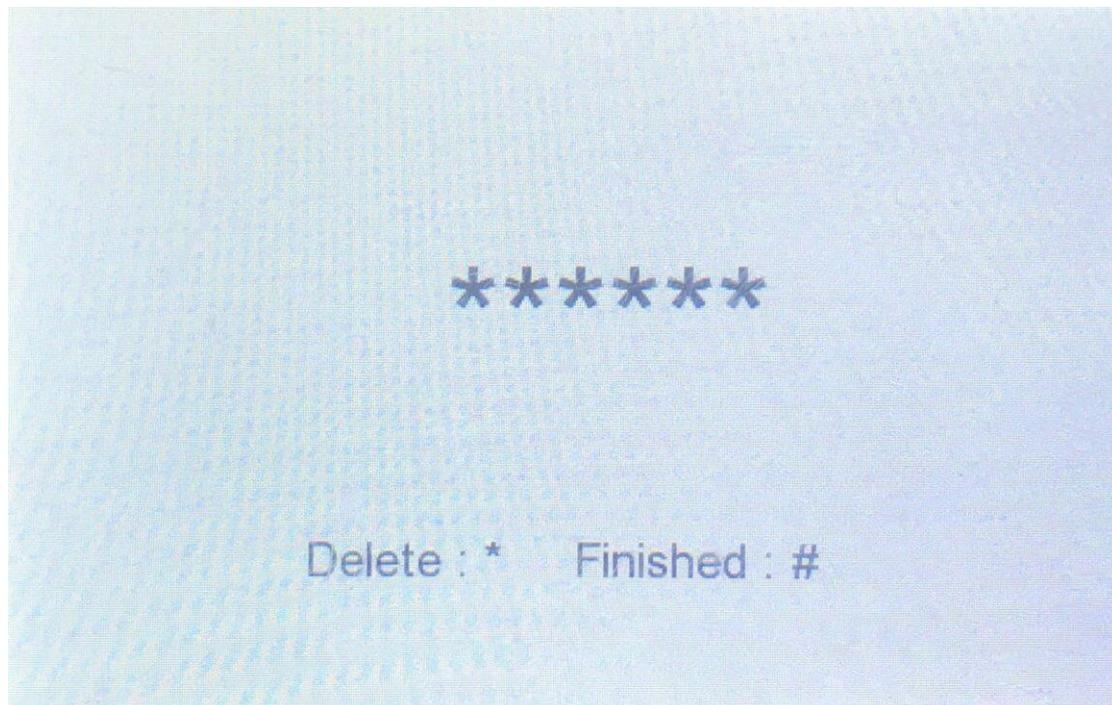

Title:	How to set door station passwords on in door station	Version:	v1.0	Date:	23/11/2017
Product:	Video Intercom	Page:	4 of 4		

HIKVISION

First Choice for Security Professionals

HIKVISION Technical Support